
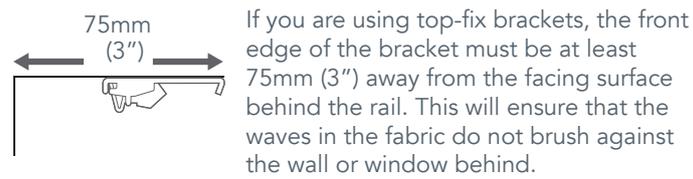


Position

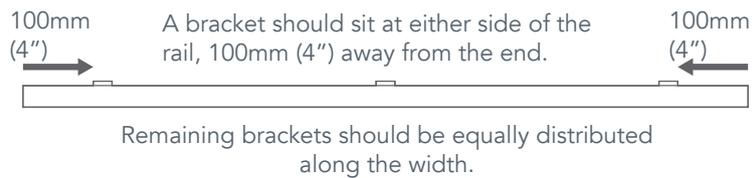

Install the brackets

Face Fix Bracket

Use two screws to fix the bracket onto the facing surface.

3 x

Loosen the screw in the centre of the top of the bracket enough to allow the locking part to move back and forth.

Locate the front lip of the curtain headrail into the front hook of the bracket.

Rotate the headrail so that the back lip slots into the locking part of the bracket, then tighten the bracket screw to secure the rail in place.

Top-Tip:

The depth of the bracket is adjustable, allowing the track to be closer to or further from the fixing surface. Loosen the screw at the back of the top section, slide the section backwards or forwards to adjust, then tighten the screw to lock.

Top Fix Bracket

Start by clipping the brackets onto the rail, spaced out as above.

Locate the front lip of the curtain headrail into the front hook of the bracket.


Rotate the headrail so that the back lip slots into the locking part of the bracket.

Hold the rail up to the fitting surface and mark out the screw holes with a pencil.


Put the rail safely to one side and drill holes where you marked out the brackets, then insert a rawl plug into each hole.

Use a single screw for each bracket, through the centre hole in the top of the bracket.


Hang your curtains

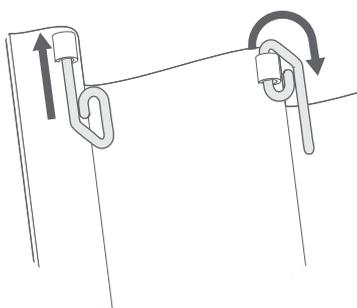

Take your curtain hooks and thread them up through the fabric eyelets on the back of each fold of the curtains.

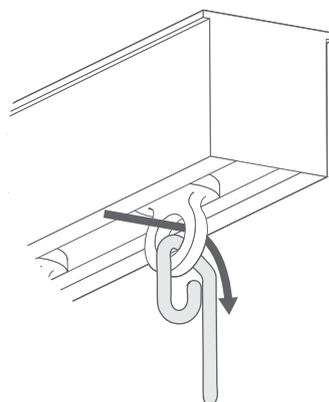

Insert the hooks into the plastic eyelets in the headrail.

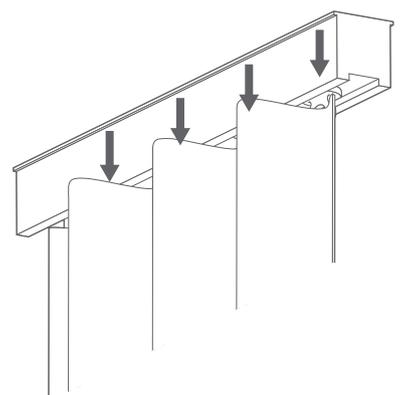

Continue until all of the hooks are inserted, then enjoy your beautiful new curtains!